




Under Mount Rims are designed to attach the sink to the underside of a solid material countertop such as epoxy. Scientific Plastics manufactures these rims in specific sizes for your sink or as a universal, two-piece rim which can be modified in the field to fit your sink.

Installation is straightforward—simply slide the under mount rim onto the sink from the bottom, mark and pre drill matching holes through the sink flange, and screw it into the bottom of the countertop using the rim as a continuous washer. A bead of high grade silicone can be used along the holes for extra mounting strength and sealing.


Before you do that you should determine:

- A) What material is the countertop made of, and
- B) How big, or how much weight will the sink support?

Both of these questions will determine what type of screw fastener and/or under-sink support will be required.

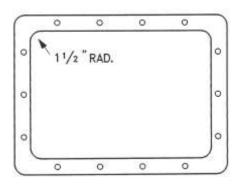

Size-specific Undermount Rim

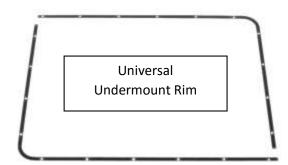



A uni-strut/all thread system works well for large sinks that will have a lot of weight in them. Please consider the application and support accordingly. Scientific Plastiscs is not responsible for damage caused by a sink not supported correctly.