


### Double Bowl Waste Assembly (Side Drain With Adjustable Riser Trap - Polyolefin)

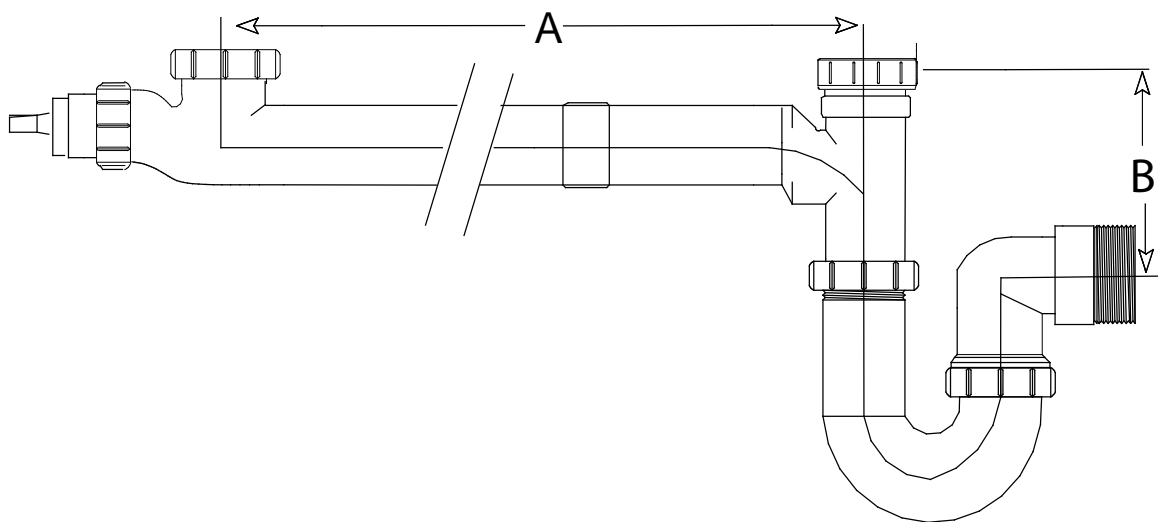

This double-bowl assembly offers up to 15-1/2" adjustability between tailpiece centers. Extensions available for longer centers. A central baffle prevents crossflow of waste to opposite branches. Offer full flow drainage with minimum drop to trap. Inlets are 1-1/2" NPS loose nut and outlet is 1-1/2" NPS thread. Color is white.

SYMBOL	INLET	OUTLET	A MIN.	A MAX.	B MIN.	B MAX.
W38586-150	1.5" NPS	1.5" NPSL	4.5"	20"	6"	8.5"