


ENGINEERING SPECIFICATIONS: Vent shall be manufactured from polypropylene resin and shall conform to ASTM #1412-92 for corrosion resistance and material content. Vent will contain no PVC or solvents used for assembly. Vent may be constructed using rigid or flexible polypropylene pipe as required. Vent will be manufactured by Scientific Plastics Company of Kansas City, KS, USA.

NOTES:



- Assembly reference: Compression fittings are to be handtight only.
- Flex tubing is to be installed with an upward draft with no kinks or loops for maximum airflow.
- Rigid pipe and flex tubing is easily trimmed in the field.
- Minumum space required to accomodate sweep 4.94 from cabinet wall.
- All dimensions are in inches.
- Custom vents & lengths are available.




Check box for optional squeezed
Top penetration. For oval cutout
With dims of 1.965 X 1.437.



Oval Cutout

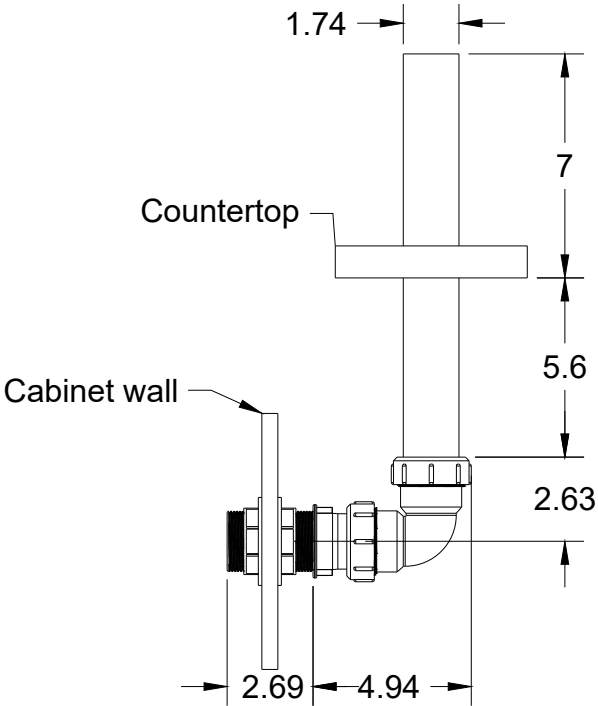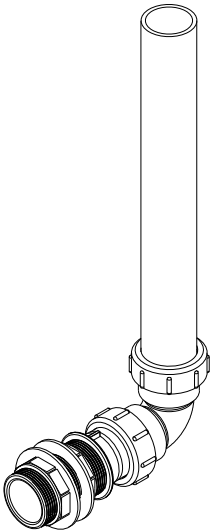

Narrow chase vent

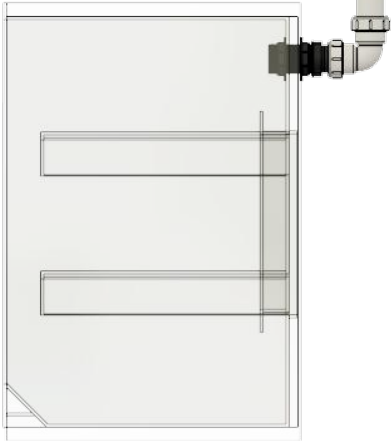

(Installed with S.P. cabinet liner)

MODEL: F160L060-150

DESCRIPTION:

Single acid rigid vent - standard
top penetration - narrow chase.

DWG BY: Philip Llamas

DATE: 12/4/2018

PRODUCT SPECIFICATION

SCIENTIFIC PLASTICS COMPANY



1016 SOUTHWEST BLVD
KANSAS CITY KS 66103
(913)-432-0322 OFFICE
(913)-432-0459 FAX

